




COPROD

Mounting Recovery Sleeve


QUICK REFERENCE

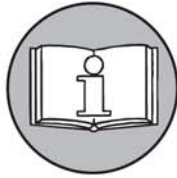

9852 1321 01

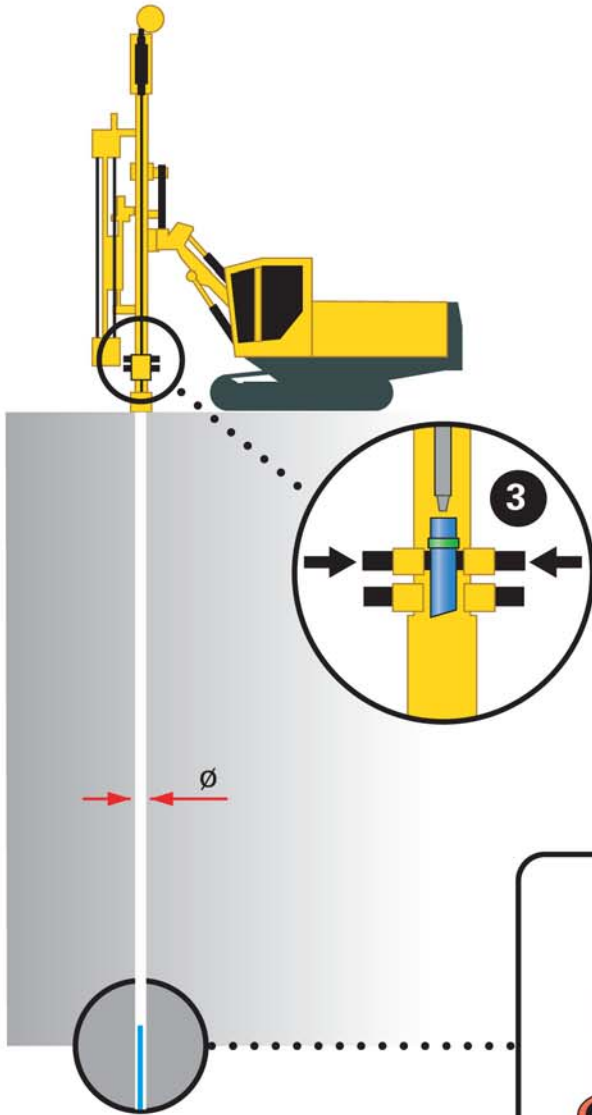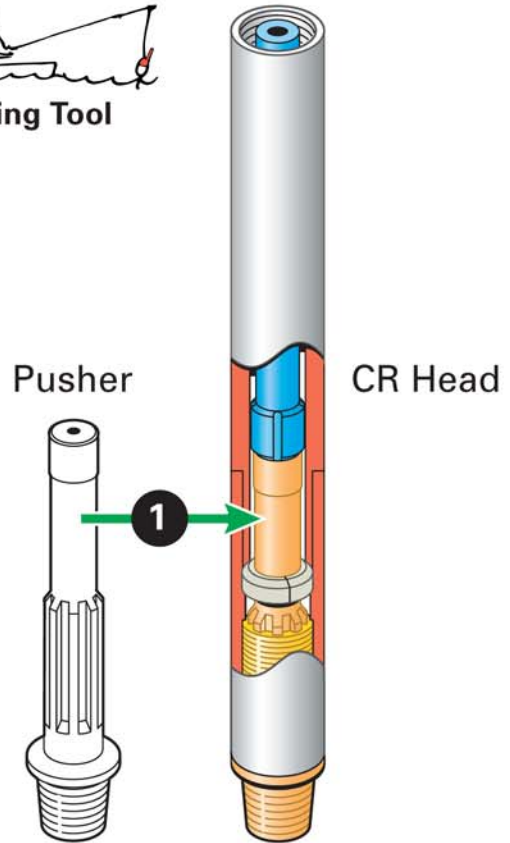

Recovery Sleeve






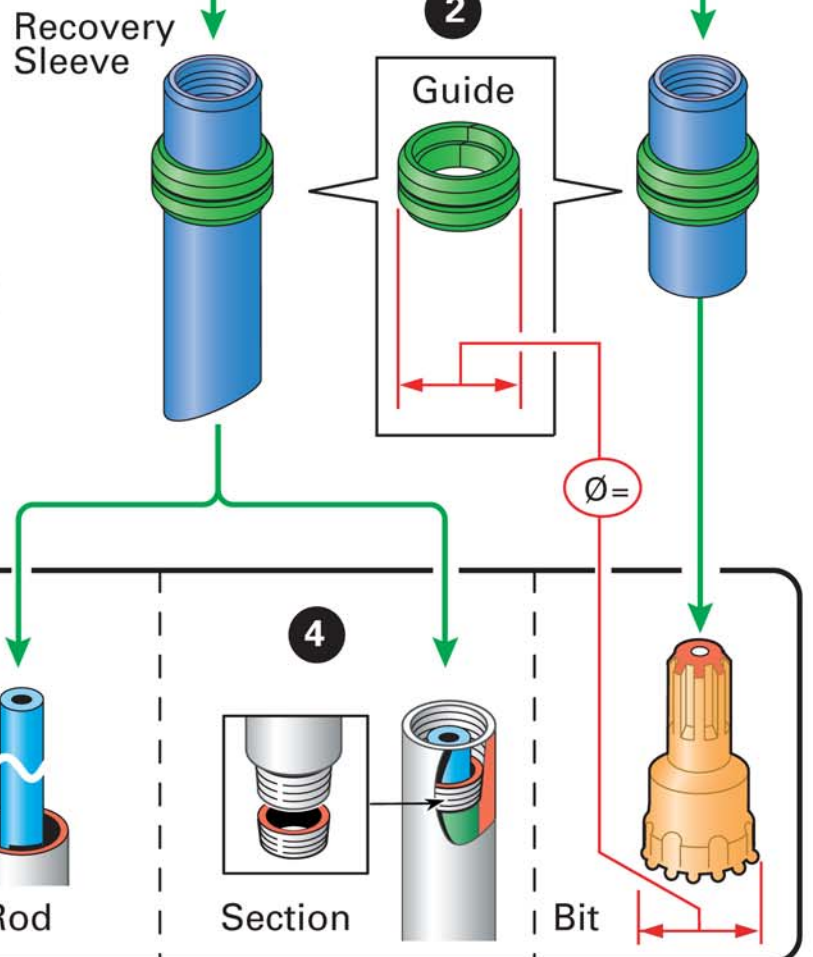


9852 1411 01


COPROD

Boarding

QUICK REFERENCE

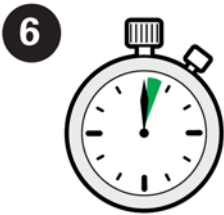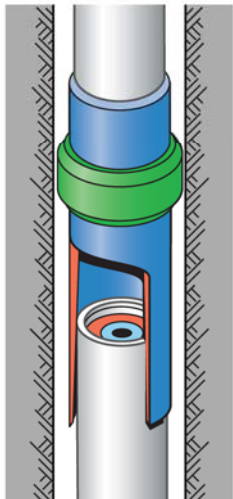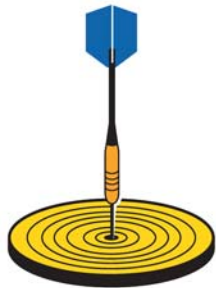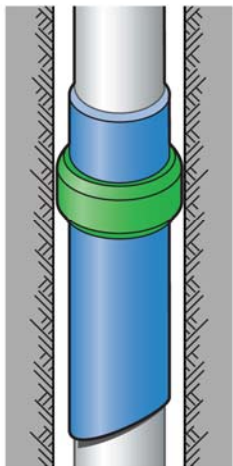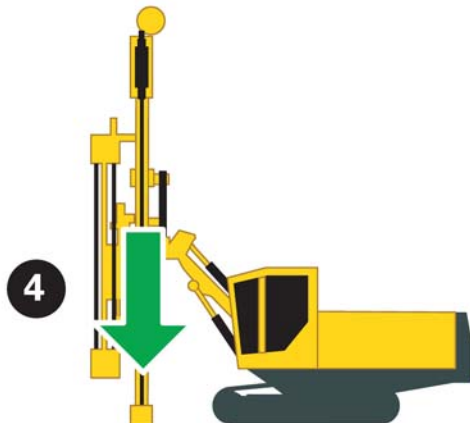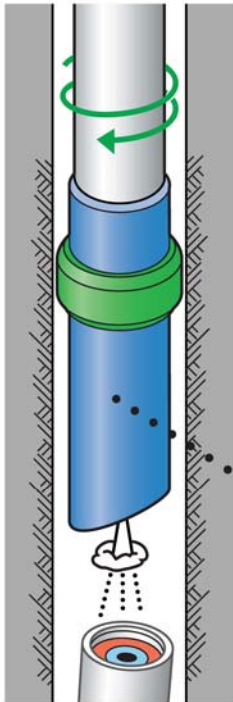






2-3 sec

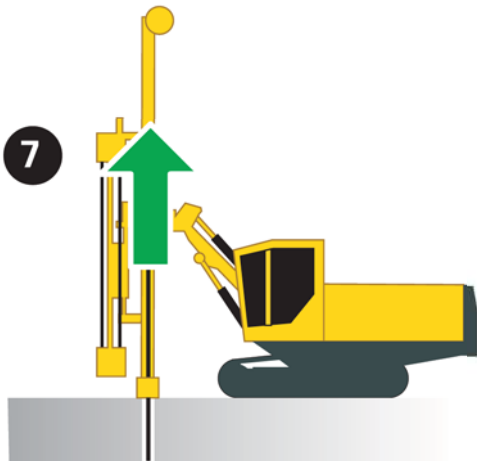

COPROD

Dismounting recovery sleeve on section

QUICK REFERENCE

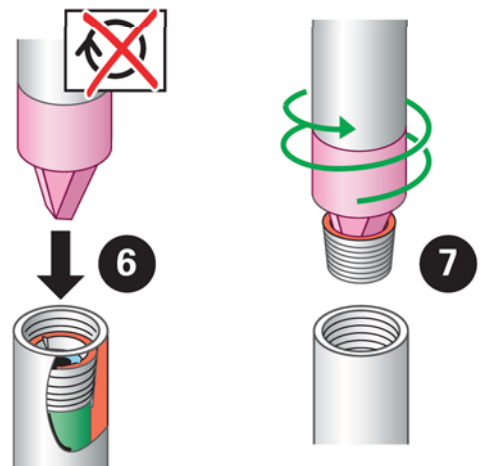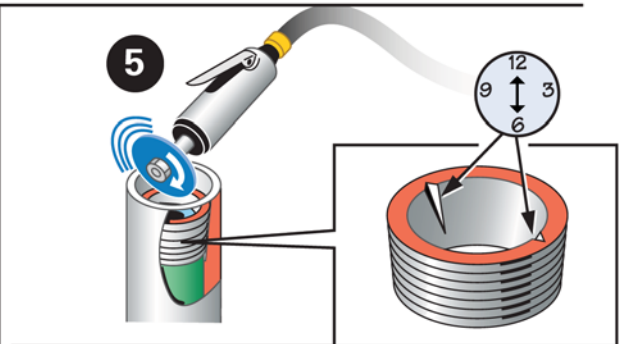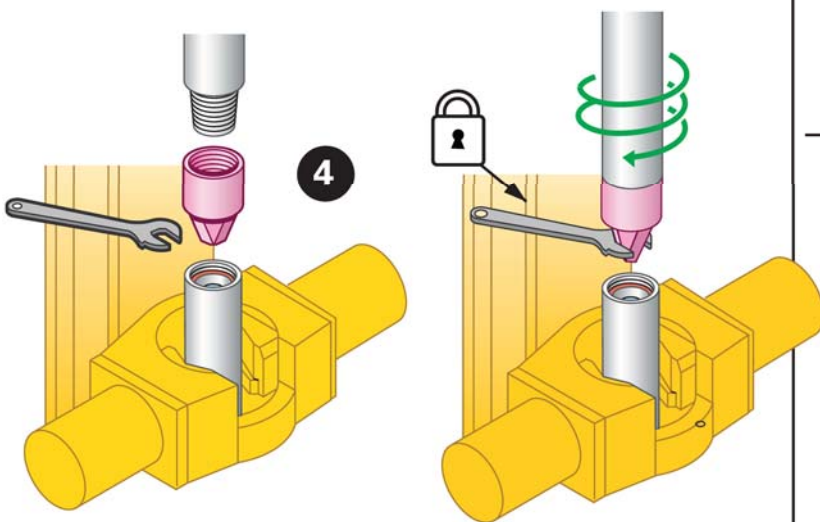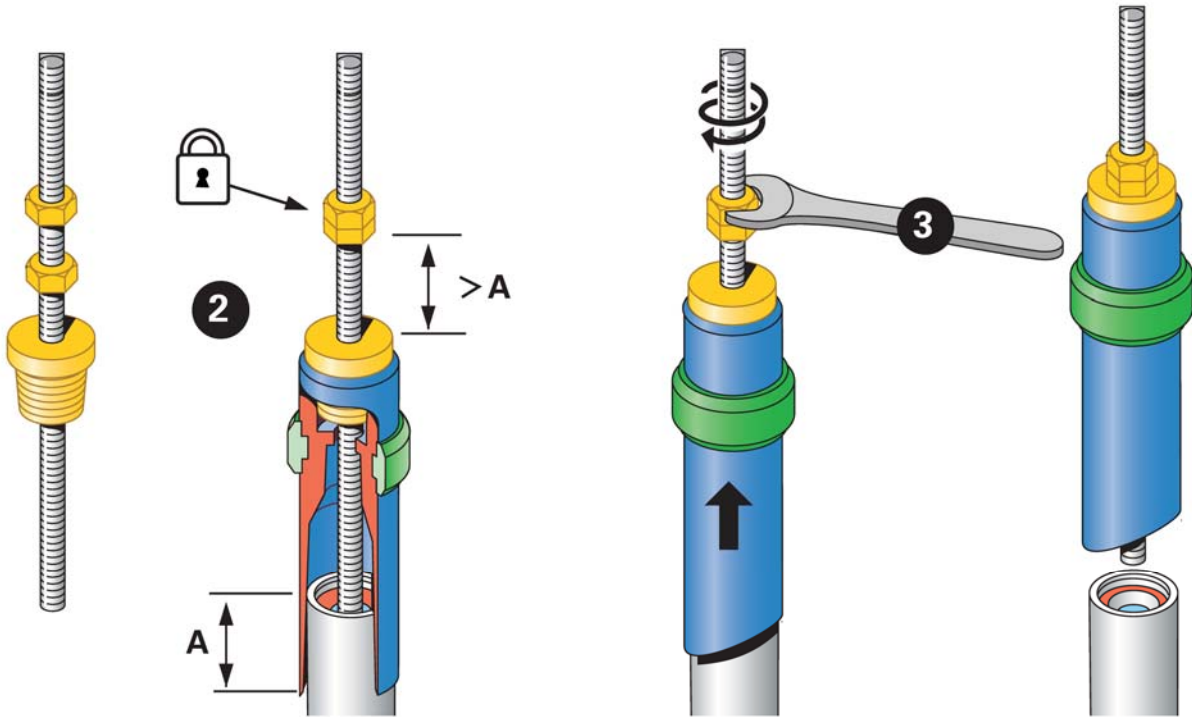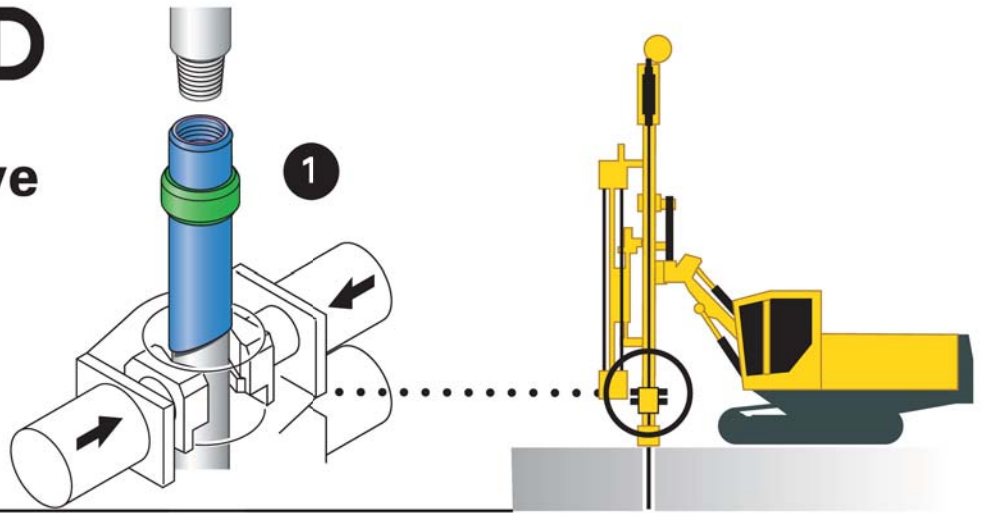

COPROD

Dismounting recovery sleeve on rod

QUICK REFERENCE

